




Loose Bolt Zinc Plated

VJT Code	Description	Thread Ø	Drill-Ø (mm)	Max. Fixture Thickness (mm)	Shield Length (mm)	Bolt Length (mm)	Hole Depth (mm)	Box Qty
04300010	Shield Anchor 0610L Loose Bolt BZP	M6	12	10	45	55	50	50
04300020	Shield Anchor 0625L Loose Bolt BZP	M6	12	25	45	70	50	50
04300030	Shield Anchor 0640L Loose Bolt BZP	M6	12	40	45	85	50	50
04300040	Shield Anchor 0810L Loose Bolt BZP	M8	14	10	50	65	55	50
04300050	Shield Anchor 0825L Loose Bolt BZP	M8	14	25	50	80	55	50
04300060	Shield Anchor 0840L Loose Bolt BZP	M8	14	40	50	95	55	50
04300070	Shield Anchor 1010L Loose Bolt BZP	M10	16	10	60	75	65	50
04300080	Shield Anchor 1025L Loose Bolt BZP	M10	16	25	60	90	65	50
04300090	Shield Anchor 1050L Loose Bolt BZP	M10	16	50	60	115	65	50
04300100	Shield Anchor 1075L Loose Bolt BZP	M10	16	75	60	140	65	25
04300110	Shield Anchor 1210L Loose Bolt BZP	M12	20	10	75	90	85	25
04300120	Shield Anchor 1225L Loose Bolt BZP	M12	20	25	75	105	85	25
04300130	Shield Anchor 1240L Loose Bolt BZP	M12	20	40	75	120	85	25
04300140	Shield Anchor 1260L Loose Bolt BZP	M12	20	60	75	140.00	85	25
04300150	Shield Anchor 1615L Loose Bolt BZP	M16	25	15	115	130	125	10
04300160	Shield Anchor 1630L Loose Bolt BZP	M16	25	30	115	155	125	10
04300170	Shield Anchor 1660L Loose Bolt BZP	M16	25	60	115	175	125	10

Installation Procedure

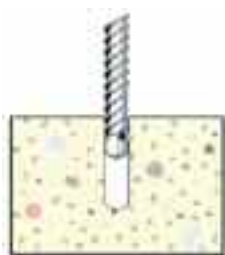


1. Drill hole to correct diameter and recommended depth.



2. Remove debris and clean hole thoroughly.



3. Remove bolt and washer, insert the shield into the hole.

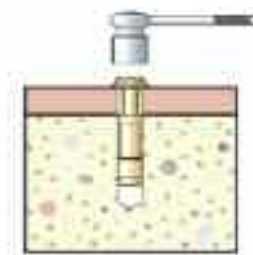

4. Insert bolt through washer and fixer, replace bolt into shield and tighten to the recommended torque.