



The bolt that bites.

PEG ANCHOR MOLABOLT FITTING GUIDE




Fast easy application

Example shown as
16mm Peg Anchor

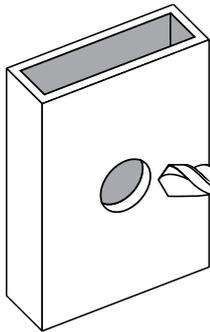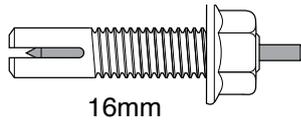


Drill 16mm hole

1. Locate nut at top of stud

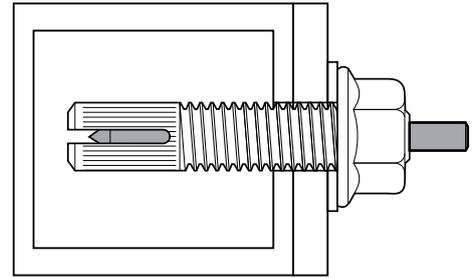


Please note care should be taken not to impact pin until bolt is fully home


2. Insert into hole, allowing slotted section to pass through hole

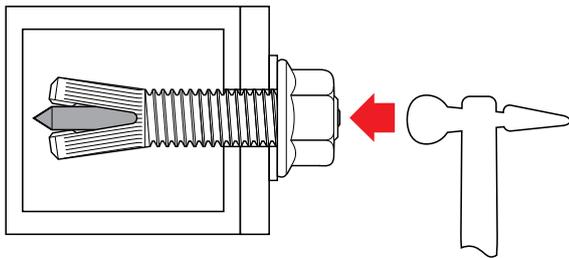

3. Strike pin home

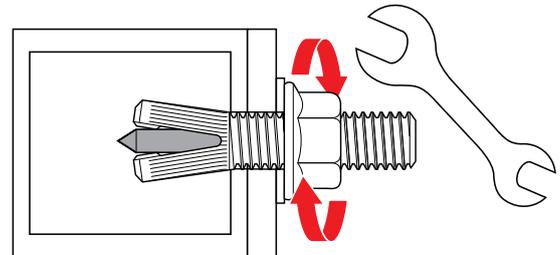

4. Torque to ABS recommendations

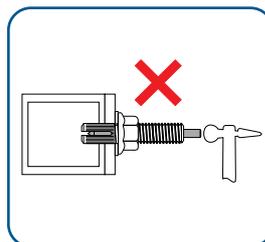

MOLABOLT MANUFACTURED BY ADVANCED BOLTING SOLUTIONS

8 Frog Island, Leicester, LE3 5AG

+44 (0)116 251 2251 info@molabolt.co.uk molabolt.co.uk

JUNE 2025
39027