

# FFP3 NR D HALF MASK HY8232

DUTI Code: 24801211

## DESCRIPTION & APPLICATION

The DUTI FFP3 NR D half mask HY8232 offers protection against both liquid and solid aerosols. The half mask is compliant with guidelines EN 149:2001 + A1:2009 and features an exhalation valve to help reduce moisture and heat build-up beneath the mask.

This half mask offers excellent comfort and safety thanks to the cushion-fit lining and secure headband which attaches at four points.

## PRODUCT INFORMATION

- Conforms to EN149:2001+A1:2009
- Filter Valve Dolomite tested to improve breathing in particularly dusty environments
- Includes exhalation valve to reduce heat and moisture
- No exposure of metal parts
- Fold flat for easy storage
- Designed to fit comfortably
- Vertical folding design allowing for a wide field of view
- Stays secure to the face
- Individually bagged for hygiene
- Adjustable and continuous Latex-free head strap
- Adjustable nose clip
- Soft inner nose foam for added comfort
- Half mask designed for single shift use
- 20 half masks per box


## STORAGE INSTRUCTIONS

Maximum relative humidity <90%

Storage temperature -10°C to +50°C



<90%

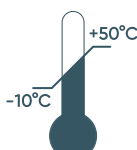

-10°C

+50°C



## FITTING INSTRUCTIONS



1. Hold the respirator in hand with the nosepiece at your fingertips. Allow headbands to hang freely below hand.
2. Cup the respirator firmly against your face with the nosepiece on the bridge of your nose.
3. Stretch and pull the lower headband over the head and position below your ears. Stretch and pull the top headband on the back of your head above your ears.
4. Press soft nosepiece to conform snugly around the nose.
5. Cup both hands over the respirator and inhale sharply. A negative pressure should be felt inside respirator.